



High Pressure Tube Replacement Instruction

Problem description


When changing HP (High Pressure) tubes, due to the differences between tube models, we may need to adjust the position of the intensifier so the new tube can fit.





Solution

1. Find the 4 screws under the intensifier like shown in the red circles below.

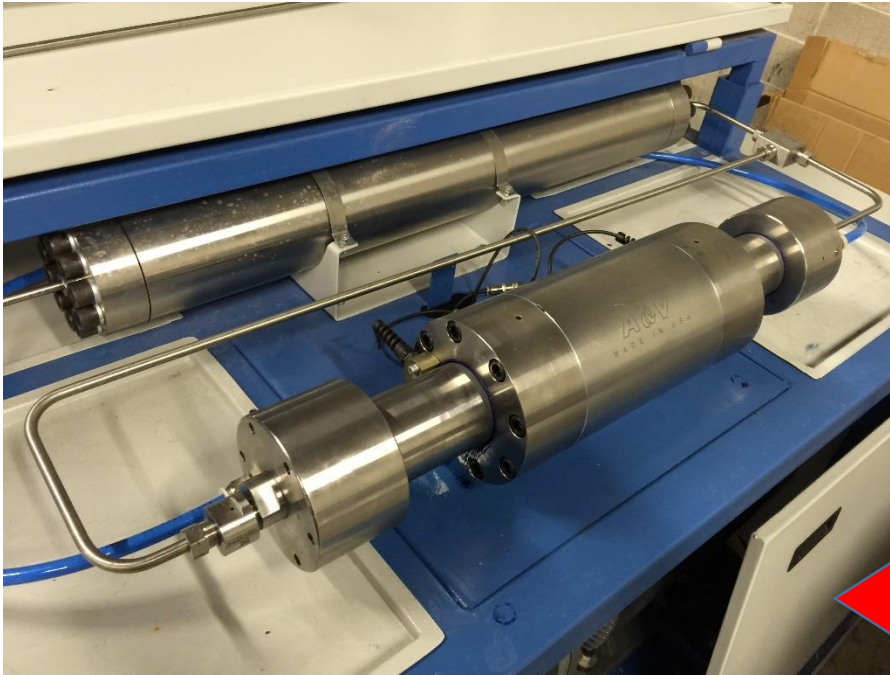

Under the board



2. Loosen them and adjust the position of the intensifier.
3. Replace the new high pressure tube and tighten the 4 screws in the red circles.