



Waterjet Tech.

N116 W18395 Morse Drive, Germantown, WI 53022 USA www.avwaterjet.com

Office: (262)250-8100

Fax: (262) 250-8690

Email: sales@avwaterjet.com

Manually Pressure Adjustment Instruction




The high pressure is set by A&V Waterjet technician during installation or default by manufacturing company. Following steps show you how to adjust it manually once it is needed.

1. For the pump in working condition (otherwise the pressure will not change), take out the side cover A like shown in the picture



2. Look for the black rotary knob inside the pump.

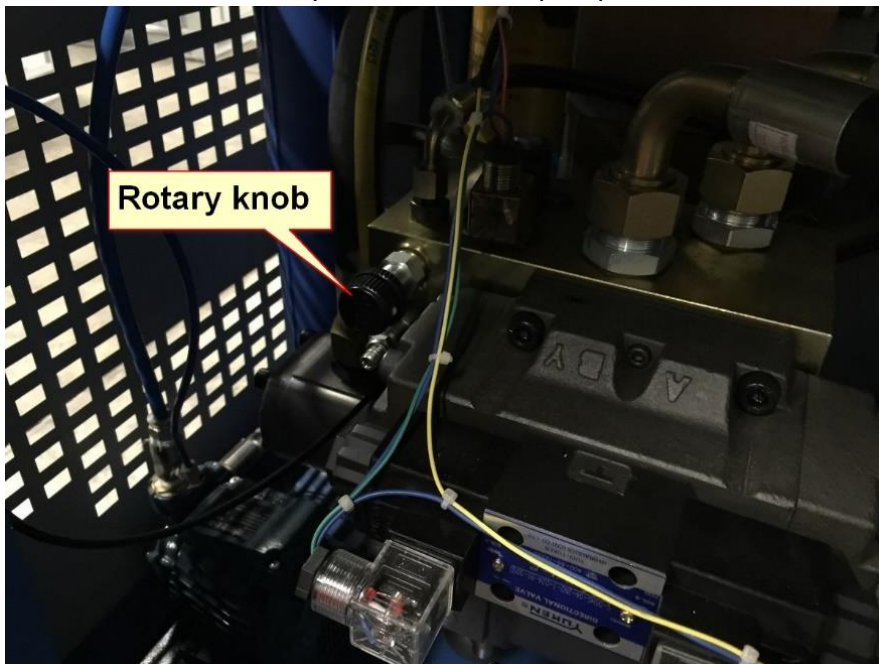



3. To increase pressure, turn the rotary knob slightly clockwise. To reduce pressure, turn the rotary knob slightly anti-clockwise. The change will reflect from the meter below and set the 2nd meter 17 MPa which is defaulted by manufacturing company. Read article how to read the high pressure.



4. Put the side cover A back and the pump is ready to use.