



A&V Waterjet Cutting Head Replacement Instruction



1. Unscrew the used cutting head from the cutting body. Also unscrew the nozzle from it. It looks like the picture shown below.



2. Take a new cutting head out from your spare package. Then screw it back to the cutting body.





3. Screw the nozzle back and it's ready to use.

